




# Thule Touring 700 / Alpine

6347


**THULE**  
SWEDEN

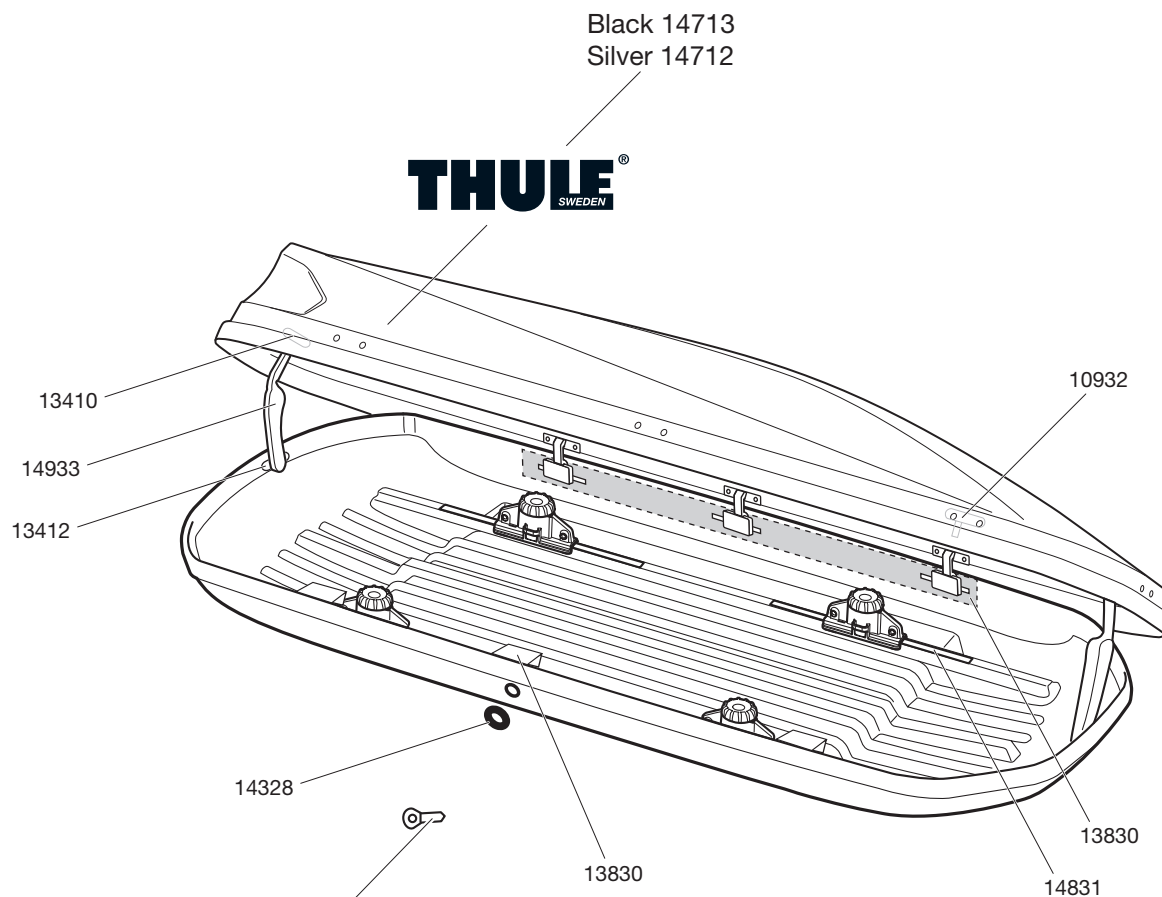

 = N.....  


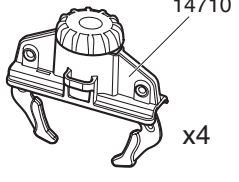
**No**  
 N001-N200  
**Sparepart No**  
 1500001001 - 1500001200

+



**No**  
 N001-N200  
**Sparepart No**  
 1500000001 - 1500000200


**10746**



14710

x4

**10719**

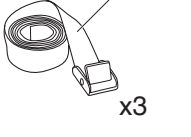

10720

x3